
Owner's Manual

A Panel

Picture B: Before installation, firstly, to open a hole Φ110mm(4-3/8") of the panel, make sure there is a space with(55mm backyard of panel) as well.


Picture D: Put the gauge in the hole and screw down.

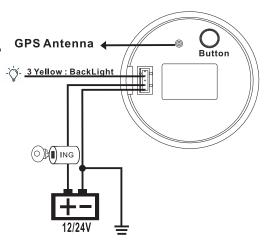

F Wiring diagram

Connection

1 Black: Ground(-) 2 Red: 9-32VDC 3 Yellow:Backlight

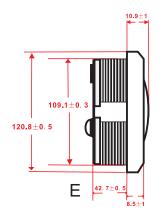


Picture E:Size and annotations

Technical parameters:

Operatingvoltage: 9~32VDC Operating current: ≤100mA

Operating temperature: -30~ 80°C Storage temperature: -40~ 85°C

GPS Antenna Installation Instructions

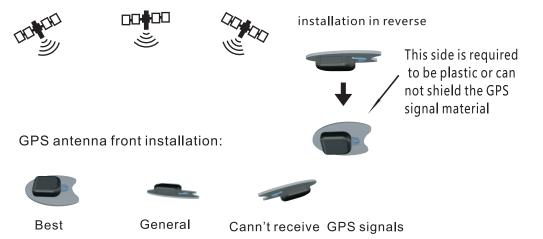

- 1. Turn it on, then the meter star to search the signal and LCD will display "gps---", if there is still no GPS signal after three minute, LCD displays "Err".
- 2. Short press the button to change the backlight color: Backlight changed in sequence: red (default) \rightarrow green \rightarrow blue \rightarrow white \rightarrow yellow \rightarrow cyan \rightarrow Purple \rightarrow (automatic). Automatic: Automatically switch the backlight color every 1 minute, Cycle switch according to the above sequence.